









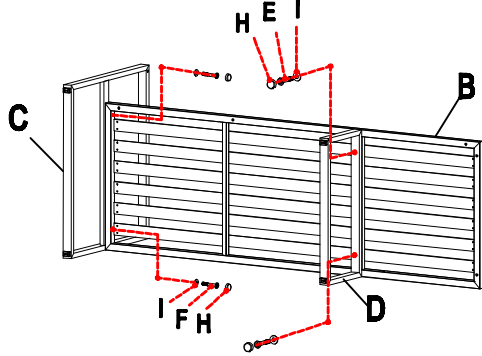


# ASSEMBLY INSTRUCTION SHEET SOFA


## PARTS LIST

<b>A</b>	<b>BACK BOARD</b> 	<b>1</b>	<b>F</b>	BOLT (M6*45MM) 	<b>7</b>
<b>B</b>	<b>SEAT BOARD</b> 	<b>1</b>	<b>G</b>	BOLT (M6*70MM) 	<b>2</b>
<b>C</b>	<b>LEFT ARMREST</b> 	<b>1</b>	<b>H</b>	PLASTIC BOLT CAP 	<b>11</b>
<b>D</b>	<b>MID BASE</b> 	<b>2</b>	<b>I</b>	METAL WASHER 	<b>11</b>
<b>E</b>	<b>BOLT (M6*35MM)</b> 	<b>2</b>	<b>J</b>	ALLEN WRENCH 	<b>1</b>


### Step 1



### Step 2

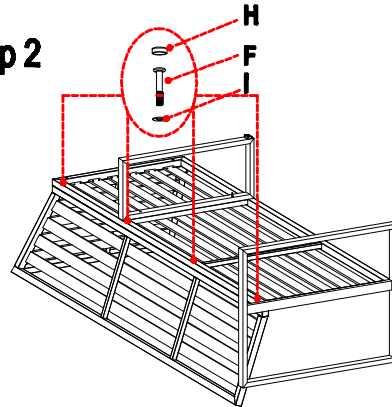

### Step 3

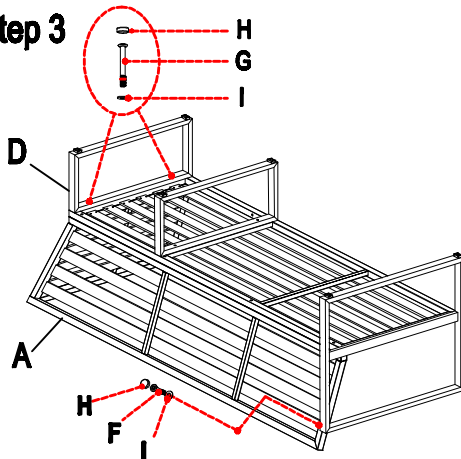

### Step 4

